

Flexible specimen holder

LaboForce-100, Tegramin-25, Tegramin-30

Instruction Manual

Original Instructions

Doc. no.: 17067026_A_en
Date of release: 2022.10.13

Copyright

The contents of this manual are the property of Struers ApS. Reproduction of any part of this manual without the written permission of Struers ApS is not allowed.

All rights reserved. @ Struers ApS 2022.10.13.

Table of Contents

1	Sate	ty	5		
	1.1	Intended use	5		
	1.2	Safety messages	5		
	1.3	Safety messages in this manual	6		
2	Gett	ing started	7		
	2.1	Device description	7		
	2.2	Overview	8		
	2.3	Checking the packing list	8		
3	Tran	sport and storage	8		
	3.1	Long-term storage or shipping	9		
4	Instr	ructions for use	9		
	4.1	Specimen size and processing	9		
	4.2	Placing the specimens	12		
	4.3	Handling a flexible specimen holder	13		
	4.4	Adjusting the height of the flexible specimen holder	15		
	4.5	Adjusting the horizontal position of the flexible specimen holder	16		
5	Main	ntenance	17		
6	Tech	nnical data	18		
7	Trou	ıbleshooting	19		
8	Disposal				
9	Man	Manufacturer			
		Declaration of Incorporation of Partly Completed Machinery			

1 Safety

1.1 Intended use

The device is intended to be used as a specimen holder to secure the specimen during a semi-automatic materialographic preparation process.

The device is intended to be used in combination with Struers equipment for grinding/polishing:

- Tegramin-25: 140 mm diameter flexible specimen holder
- Tegramin-30: 160 mm diameter flexible specimen holder
- LaboForce-100: 140 and 160 mm diameter flexible specimen holder



Note

The software installed in all machines produced before November 2023 must be updated before the flexible specimen holder can be used



Note

If you have an older version of the Instructions Manuals for the following machines you may have to download an updated version containing instructions on how to use the flexible specimen holder:

- Tegramin-25
- Tegramin-30
- LaboForce-100

Visit the Struers web page for the latest manual version, or contact your sales representative.

Do not use the device for the following

Any other equipment than stated in this section

1.2 Safety messages

Signs used in safety messages

Struers uses the following signs to indicate potential hazards.



ELECTRICAL HAZARD

This sign indicates an electrical hazard which, if not avoided, will result in death or serious injury.



This sign indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.



WARNING

This sign indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.



CAUTION

This sign indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.



CRUSHING HAZARD

This sign indicates a crushing hazard which, if not avoided, could result in minor, moderate or serious injury.

General messages



Note

This sign indicates that there is a risk of damage to property, or a need to proceed with special care.



Hint

This sign indicates that additional information and hints are available.

1.3 Safety messages in this manual



CAUTION

Ignoring this information and mishandling of the equipment can lead to severe bodily injuries and material damage.



Struers equipment must only be used in connection with and as described in the Instruction Manual supplied with the equipment.



CAUTION

Read this Instruction Manual, as well as the Instruction Manual for the machine with which you are going to use this accessory.



CRUSHING HAZARD

Keep your hands clear of the flexible specimen holder when lowering the specimen mover.



CAUTION

To ensure that the machine with which you are using the flexible specimen holder can fixate the specimen securely, the following software version must be installed on the machine.

- Tegramin-25, Tegramin-30: V. 1.33 or later
- LaboForce-100: V. 3.03 or later

Failure to do so can result in specimens being ejected from the machine.



CAUTION

To prevent specimens from detaching from the specimen holder, make sure that the specimen or specimens are covered completely by the flexible specimen holder.



CAUTION

Use only specimens that are within the recommended dimensions. If they are not within the recommended dimensions, they can detach from the flexible specimen holder and drop.

2 Getting started

2.1 Device description

The device is a specimen holder with spring-loaded pins that secures the specimen during the preparation process.

The operator secures the specimen in the device, and makes sure that the specimen does not protrude from the specimen holder.


The operator places the device in the machine.

The operator places the specimen on the preparation surface and starts the machine by pressing the Start button.

The machine stops automatically when the process is completed.

The operator cleans the specimen before the next preparation step or inspection.

2.2 Overview

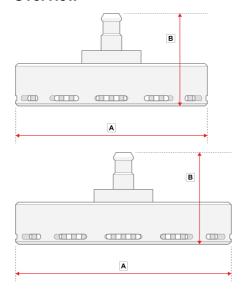

A: 149 mm (5.86")

B: 72 mm (3")

A: 169 mm (6.65")

B: 72 mm (3")

2.3 Checking the packing list

Optional accessories may be included in the packing box.

The packing box contains the following items:

Pcs.	Description	
1	Flexible specimen holder	
1	Instruction Manual set	

3 Transport and storage

If, at any time after the installation, you have to move the unit or place it in storage, there is a number of guidelines we recommend that you follow.

Package the unit securely before transportation.
 Insufficient packaging could cause damage to the unit and will void the warranty. Contact Struers Service.

Struers recommends that all original packaging and fittings are kept for future use.

3.1 Long-term storage or shipping

Before storage or shipping, place the device in its original packaging.

4 Instructions for use



CRUSHING HAZARD

Keep your hands clear of the flexible specimen holder when lowering the specimen mover.



CAUTION

Read this Instruction Manual, as well as the Instruction Manual for the machine with which you are going to use this accessory.



CAUTION

To ensure that the machine with which you are using the flexible specimen holder can fixate the specimen securely, the following software version must be installed on the machine.

- Tegramin-25, Tegramin-30: V. 1.33 or later
- LaboForce-100: V. 3.03 or later

Failure to do so can result in specimens being ejected from the machine.

4.1 Specimen size and processing



Note


Remove burrs and sharp edges from the specimen before preparation.



Note

Do not use the flexible specimen holder for preparing round, solid specimens with a uniform surface.

You can use the flexible specimen holder for preparing round, hollow specimens.

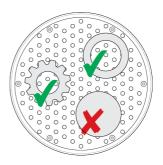

Specimen sizes




Use only specimens that are within the recommended dimensions. If they are not within the recommended dimensions, they can detach from the flexible specimen holder and drop.

Flexible specimen holder size			
140 mm (5.5")	Height Min.: 10 mm (0.4")		
		Max.: 20 mm (0.8")	
	Area	Min.: 20 x 40 mm (0.8 x 1.8")	
	Max.: 90 x 90 mm (4		
160 mm (6.3") Height M		Min.: 10 mm (0.4")	
		Max.: 20 mm (0.8")	
,		Min.: 20 x 40 mm (0.8 x 1.8")	
		Max.: 100 x 100 mm (4.3 x 4.3")	

Specimen shape


- The height of the specimens must not vary more than 6 mm (0.23"). Holes, cavities, etc. must not exceed 50 % of the total specimen area.
- The angle of the edge of the specimen must not be greater than 50°. If the angle is greater, the specimen can fall out of the flexible specimen holder.

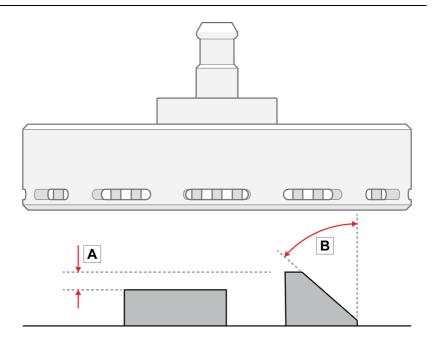



Note

Do not use the flexible specimen holder to prepare specimens where the top part of the specimen is not supported by the bottom part of the specimen. If you do, the specimen will tilt.

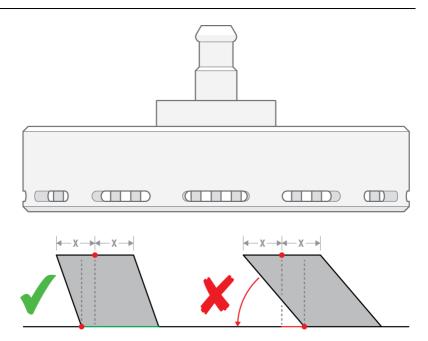


4.2 Placing the specimens



Note

Place the specimens so that they do not extend beyond the MD-disc.

Always place the longest side of the specimen so that it is parallel with the rotational direction.

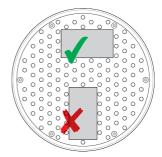

4.3 Handling a flexible specimen holder

Procedure

- From the Main menu screen select Flexible specimen holder methods.
- 2. If the menu item **Flexible specimen holder methods** is not available in the main menu, you must activate it in the software:

Select Configuration -> Options and set Flexible specimen holder to Yes.

Procedure

- From the Main menu screen select Flexible specimen holder methods.
- 2. If the menu item **Flexible specimen holder methods** is not available in the main menu, you must activate it in the software:

Select Configuration -> Options and set Flexible specimen holder to Yes

Inserting a flexible specimen holder



CAUTION

To prevent specimens from detaching from the specimen holder, make sure that the specimen or specimens are covered completely by the flexible specimen holder.



CRUSHING HAZARD

Keep your hands clear of the flexible specimen holder when lowering the specimen mover.

Procedure



Hint

Make sure that you use sufficient force according to the specimen size and Struers recommendations.

The Struers Metalog Guide methods are based on a specimen with an area of 7 cm².

Adjust the method according to your specific specimen area.

Procedure

Hint

Make sure that the preparation surface is sufficiently wet before you start the preparation process.

 Press the Lower/Raise button to make sure that the specimen mover head is fully raised.

 


- 2. Press the black button on the specimen mover head.
- Insert the flexible specimen holder and rotate it until the three pins are aligned with the holes in the specimen mover.
- 4. Push the flexible specimen holder upwards until it locks into position.
- Release the black button on the specimen mover head. Make sure that the flexible specimen holder is securely fixed

Using the flexible specimen holder

- Place the specimen or specimens on the preparation surface.
- Press the Lower/Raise button to lower the flexible specimen holder.
- Make sure that no specimens protrude from the flexible specimen holder. If they do, adjust the specimens.
 - Press the Lower/Raise button to raise the flexible specimen holder.
 - Adjust the specimens.
- 4. Repeat until all specimens are placed correctly.
- 5. Start the preparation process.

The preparation process stops automatically when the set preparation time has expired.









Adjusting the height of the flexible specimen holder



Note

This procedure applies only to Tegramin-25 and Tegramin-30.

To prevent the flexible specimen holder from coming into contact with the preparation surface, you can adjust the height between the flexible specimen holder and the preparation surface.

 Select Configuration> Miscellaneous > Min. distance flexible holdersurface. The lower the value, the closer the flexible specimen holder can move towards the preparation surface before the software stops it from moving further downwards.

Adjusting the height of the flexible specimen holder



Note


This procedure applies only to LaboForce-100.

Adjust the height of the ring to be able to use the flexible specimen holder with LaboForce-100. See the manual supplied with the specific equipment.

4.4 Adjusting the height of the flexible specimen holder


The following applies only when a flexible specimen holder is used.

- With a flexible specimen holder mounted, place a preparation surface on the preparation disc.
- Select the 'thickest' preparation surface to be used and place it on the preparation disc. Usually, this will be SiC Foil on an MD-Gekko disc, or SiC Paper on an MD-Fuga disc, or an MD-Alto.
- Place a spacing disc at a height of 20 mm on the preparation surface so that it is below the edge of the flexible specimen holder.

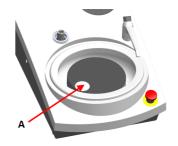

A Spacing disc

 Support the LaboForce-100 head and loosen the screw in the adjustment ring.

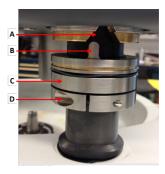

- A V-shaped groove
- B Pin
- c Adjustment ring
- **D** Fastening screw
- Press the Lower/Raise button to lower the specimen mover head. An error message will appear as the specimen mover head is not in contact with the adjustment ring.



- Move the adjustment ring up until the pin fits into the Vshaped groove on the cabinet of the control panel.
- 7. Tighten the adjustment ring to fix it in this position.
- Press the Turn/push knob knob to clear the error message.
- Press the Lower/Raise button to raise the specimen mover head.



4.5 Adjusting the horizontal position of the flexible specimen holder

With a flexible specimen holder:

- Press the Lower/Raise button to lower the specimen mover head.
- Loosen the 2 fastening screws holding the column of the control panel.
- Place the flexible specimen holder in a position that does not allow the specimen to run more than 1 mm over the edge of the preparation disc.



5 Maintenance

Proper maintenance is required to achieve the maximum up-time and operating lifetime of the device.

Cleaning



Note

Do not use acetone, benzol or similar solvents.

Frequency

Clean the device between each preparation step or every day.

Procedure

- To clean the device, use either Lavamin, or a dish brush and a common household detergent.
 - If you have prepared specimens using a large amount of resin, clean the device with a dish brush.
- Dry the device with the pins facing downwards.
- Store the device with the pins facing downwards.

6 Technical data

Subject	Specifications		
Safety standards	CE-labeled according to EU directives		
REACH	For information about REACH, contact your local Struers office.		
Noise level	See the noise level stated for the specific machine using this device.		
Operating environment	Surrounding temperature	0-40°C (41-104°F)	
	Humidity	N/A	
Storage and transport conditions	Surrounding temperature	-30 – 60°C (32 – 140°F)	
	Humidity	Non-condensing	
Dimensions and weight	Diameter	140 mm dia.: 149 mm (5.86")	
		160 mm dia.: 169 mm (6.65")	
	Height	140 mm dia.: 72 mm (3")	
		160 mm dia.: 72 mm (3")	
	Weight	140 mm dia.: 1.3 kg (2.86 lbs)	
		160 mm dia.: 1.7 kg (3.74 lbs)	

7 Troubleshooting

Problem	Possible cause	Solution	
The process cannot be started. See error messages for the machine.	The flexible specimen holder is too close to the surface. This can be caused by incorrect configuration or height adjustment, i.e. the specimen is too low, or the force is too high.	Change the force. Use higher specimens. Change the configuration. See the Instruction Manual for the machine you are using.	
The pins on the flexible specimen holder are touching the preparation surface.	The force setting is too high, or the specimens are too low. The value in the software indicating how close to the turntable the holder can go are set to a too low value.	Decrease the force. See the Instruction Manual for the machine you are using. Increase the specimen height.	
The specimens fall out of the flexible specimen holder.	The specimens have not been placed correctly. Insufficient force is applied.	See Placing the specimens ▶12. Increase the force.	
The pins on the flexible specimen holder get stuck to the bottom plate.	The flexible specimen holder is dirty.	Clean the flexible specimen holder. See Maintenance ▶17.	

Problem	Possible cause	Solution	
The specimens develop a pencil shape.	The specimens have not been placed correctly. The sample area is too small. The specimen is too high. The specimen geometry is round and solid.	SeePlacing the specimens ▶12. Turn the specimen and repeat the step.	
It is difficult to insert the flexible specimen holder in the machine.	The coupling is worn out.	Check the coupling. Contact Struers Service.	
The surfaces are being damaged.	The specimen has burrs. The specimen has sharp edges. To high force is applied to the specimen. The specimen area is too small.	Remove burrs. Remove sharp edges. Lower the force.	
Short lifetime of the polishing cloth	The polishing cloth is too soft.	Use a harder polishing cloth. Download the brochure "Polishing cloth guide" on the Struers website.	

8 **Disposal**

Contact your local authorities for information on the correct method of disposal in accordance with national legislation.

Specimen holders are made of stainless steel and plastic and do not contain any components classified as hazardous.

Flexible specimen holders can be disposed of as metal waste.

9 Manufacturer

Struers ApS Pederstrupvej 84 DK-2750 Ballerup, Denmark Telephone: +45 44 600 800 Fax: +45 44 600 801

www.struers.com

Responsibility of the manufacturer

The following restrictions should be observed, as violation of the restrictions may cause cancellation of Struers legal obligations.

The manufacturer assumes no responsibility for errors in the text and/or illustrations in this manual. The information in this manual is subject to change without notice. The manual may mention accessories or parts not included in the supplied version of the equipment.

The manufacturer is to be considered responsible for effects on safety, reliability, and performance of the equipment only if the equipment is used, serviced, and maintained in accordance with the instructions for use.



Struers ApS • Pederstrupvej 84 • DK-2750



Manufacturer

Declaration of Incorporation of Partly Completed Machinery

		Ballerup • Denmark
Name	Flexible specimen holder	
Model		N/A
Function		Specimen holder for LaboForce-100, Tegramin-25 and Tegramin-30
Туре		07066941 and 07066961
The above listed machinery is only intended to be used and shall not be put into service until the final machinery conformity with this regulation, where appropriate.		LaboForce-100, Tegramin-25 and Tegramin-30
Serial no.		
		ı
Module [Module], according to global app	oreach	EU
We declare that the product mentioned is in conformity wi	th the following legislation, directives and standards:	
2006/42/EC		
		·
Authorized to compile technical file/ Authorized signatory	Stig Nygaard Quist VP Business Development	ate: [Release date]



- en For translations see
- bg За преводи вижте
- cs Překlady viz
- da Se oversættelser på
- de Übersetzungen finden Sie unter
- el Για μεταφράσεις, ανατρέξτε στη διεύθυνση
- es Para ver las traducciones consulte
- et Tõlked leiate aadressilt
- fi Katso käännökset osoitteesta
- fr Pour les traductions, voir
- hr Za prijevode idite na
- hu A fordítások itt érhetők el
- it Per le traduzioni consultare
- ja 翻訳については、
- It Vertimai patalpinti
- lv Tulkojumus skatīt
- nl Voor vertalingen zie
- no For oversettelser se
- pl Aby znaleźć tłumaczenia, sprawdź
- pt Consulte as traduções disponíveis em
- ro Pentru traduceri, consultați
- se För översättningar besök
- sk Preklady sú dostupné na stránke
- sl Za prevode si oglejte
- tr Çeviriler için bkz
- zh 翻译见

www.struers.com/Library